

Dog Training Collar with Walkie-talkie



Please Read The Manual Before Use




Features

- 1.Walkie-talkie:** built-in intercom system, you could talk to your pet(one-way)
- 2.Rechargeable:** rechargeable Remote and rechargeable Receiver
- 3.Waterproof Receiver:** your pet can swim or walk in the rain with it
- 4.Adjustable Levels:** You could adjust the level of Vibration mode and Shock mode from 0-99.
- 5.Four training mode:** Shock/ Vibration / Light / Sound
- 6.Three Channels :** Choose channel for max 3 Receivers with one Remote
- 7.Auto Power Save :**The Remote and Receiver will go into standby mode if no operations
- 8.Distance control :** the max distance up to 2600 ft (no obstacle) or 1600 ft (with obstacle)


Tips

- 1.Please charge before first using
- 2.Eliminate one misbehavior or teach one obedience command at one time, if the training get too fast , your pet may become confused and rebel
- 3.Before using the Shock mode to your pet , you should try Vibration to your pet first .
- 4.Observing the dog's reaction , make sure the training intensity not too much.
- 5.Check your dog's skin , don't hurt it by shock.**(Notice:** Shock mode is just used in extreme cases. If the shock mode is not necessary, we recommend you not to attach the contact points and screw caps to the receiver so as to reduce the risk of injuring your dog's neck)

Key Definition

- ① **Antenna:** transmit the signal strongly
- ② **LED light :** Press ⑪ to light it , press ⑪ again to be off.
- ③ **LCD screen :** Show the modes , levels and channels
- ④ **Shock button :** Press  to choose Shock mode, the screen show  , press + or - button to adjust the levels from 0 -- 99 , press Shock button again to make the Receiver shock.
- ⑤ **Vibration button :** Press to choose Vibration mode, the screen show  , press + or - button to adjust the levels from 0 -- 99 , press Shock button again to make the Receiver vibrate
- ⑥ **Walkie-talkie button :** Press the button twice , the Receiver sound Bee-Bee-Bee, and the indicator led flash; Hold this button and talk to the Mic hole of the Remote, the Receiver will speak what you talking
- ⑦ **- button:** press - to reduce the levels.
- ⑧ **+ button:** press + to increase the levels.
- ⑨ **Channel button :** choose your training channel between CH1/CH2/CH3 by press this button
- ⑩ **Power button:** press for 1 second to turn on the Remote , press 1 second again to turn it off
- ⑪ **Light button :** Press to light the LED of the Remote, press again , the LED will be off ; If you press and hold this button, the LED will flash
- ⑫ **Charging hole of the Remote**

- ⑬ **Mic hole** : talk to the Mic hole , the Receiver will speak what you talking
- ⑭ **Power button**: press to turn on the Receiver , press again to turn it off
- ⑮ **Charging hole of the Receiver**
- ⑯ **Contact points**: to install the rubber cap, reach to pet's skin .
Conduct the safe static
- ⑰ **Indicator light** : the light will flash when press the shock/vibration /sound button; when charging, it's on
- ⑱ **Volume +**
- ⑲ **Volume -**
- ⑳ **loudspeaker**

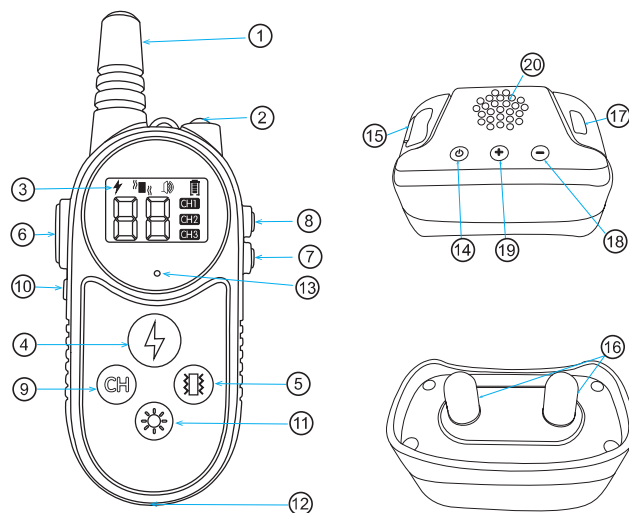

► **Please charge the Remote and the Receiver before first use**

1.Charge the Remote :

- 1.Plug the cable to the charging hole
- 2.Connect the USB charge adapter and plug it into outlet
- 3.When you charging , the battery icon in the screen will be flashing; after charge fully , the battery icon stop flashing



2.Charge the Receiver :

- 1.Open the rubber cover of the receiver's charging hole
2. Plug the cable to the charging hole
3. Connect the USB charge adapter and plug it into outlet
- 4.The indicator red LED light will be flashing ; after charge fully , the LED light will stop flashing and the green LED light is always on.



NOTE:

1. Please charge the Remote and Receiver more than 5 hours at first charging.
2. When charge the Receiver, it's in sleep mode, and can't receive the signal from the Remote.
3. There will be showing empty battery icon on the screen of the Remote if it's low battery.
4. If the Receiver is low battery, the indicator light will be on every 1 second.
5. Please charge them fully before you keep them idle for a long time, it's necessary to charge them every one month.

Auto Power Saving Function :

1. If no operation on the Remote within 10 seconds, the back lit of screen will be off, and no operation within 25 seconds, the Remote will be sleep mode, the screen display will be shut off, press any button can activate the Remote.
2. If no signal to the Receiver within 5 minutes, it will go into standby mode; you could press shock or vibration or sound button to activate it.
3. You could turn the Receiver OFF by pressing the power button of the Receiver

► Pair the Remote and Receiver

1. Press the power button for 1 second to turn on the Remote
2. Choose a channel CH1 or CH2 or CH3 by press the CH button
3. Adjust the level by press + or - button , make sure the level above 01
4. Press the Power button of the Receiver by 1.5 seconds , you hear a sound like Bee~, and the indicator light is flashing; Now quickly, Press the vibration button or Shock button within 15 seconds after the sound Bee~, you can hear a sound Bee~ again , that means the pairing successful.
5. If you have 2 or 3 Receivers , just choose the different channel , and pair as above same steps.

Note:

please remember the channel you choose to pair , if you use another channel without pair , you can't control the Receiver.




Press the Power button for 1.5 seconds

Press the vibration button

► Test the training collar set (After paired successfully)

1. Test the Shock function

Take out the test bulb and put it on the Receiver's contact point Press the Shock button  (make sure the level above 01) The test bulb will be on



2. Test the Vibration function

Press the Vibration button  (make sure the level above 01)
The Receiver will vibrate

3. Test the walkie-talkie function(one-way)

Press and hold Walkie-talkie button (PTT button), don't need to adjust the level ,and talk to the Mic hole of the Remote, the Receiver will speak what you talking



► How to wear the Receiver to your pet

1.Put the Receiver on dog's neck



2.The contact point reach to the skin of dog , you need to choose the suitable rubber cap.(If shock mode is not necessary, we recommend you not to attach the contact points and rubber caps to receiver)



3.Adjust the belt collar , make your dog comfortable.



► F.A.Q

Q: The length of the nylon belt collar ?

A: The length of the collar is 27.5 IN (70 CM)

Q: How weight dogs does this training collar suits for ?

A: We suggest above 20 lb .

Q: Is the Receiver waterproof?

A: Yes , it's totally waterproof, your dog can swim with it.(Don't soak in water for a long time)

Q: How long does my dog get training every time?

A: 10 - 15 min .

Q:What should i do if the training collar set don't work?

- A:**
1. Check the battery power of the Remote and Receiver , if low battery, charge them.
 2. Check the level , if you choose vibration mode or shock mode , adjust to above 001.
 3. Check the Receiver , if you don't turn it on , press the Power button of the Receiver.
 4. Check the channel , if you choose the different channel , press up/down button to adjust
 5. Repair the Remote and the Receiver.
 6. Check the metal screw cap if they are too short , change to install the longer cap.

Frequence : 433 MHZ
Transmitter: 3.7V 900ma LIP
Receiver : 3.7 V 900ma LIP

Made in china